

Pump-up Foamer



OWNER'S MANUAL

Pump-up Foamer

01/14/05

PARTS LIST

Item	Part Number	Description	Descripción
1	PUFPA-2	BLACK VITON PUMP ASSEMBLY	ASAMBLEA DE NEGRO VITON BOMBA
2	PUF-PRV-2	PRESSURE RELIEF VALVE	VÁLVULA DE PRECIÓN ESCAPE
3	PUF2-G-2	2 GALLON TANK	DOS GALÓN TANQUE
4	PUF-PST2	PICK-UP TUBE	TUBO DE SUCCIÓN
5	PUF-VHA	NEEDLE VALVE ASSEMBLY W/ TANK NUT, O-RING & TUBING	ASAMBLEA DE LA VÁLVULA DE AGUJA Y DOBLE TUBO DE POLIURETANO
6	B122	DOUBLE HOSE BARB x 1/2" MPT	DOBLE PUA PARA MANGUERA DE 1/2" MPT
7	PSG12	POLY SPRAY GUN, 1/2" FPT	ROCIADA PISTOLA DE POLIURETANO 1/2" FPT
	PSG12OR	O-RINGS FOR PSG12	JUNTA DE GOMA PARA LA ROCIADA PISTOLA DE POLIURETANO
8	WAAD.75	FOAM MIXING MATERIAL	ESPONJA
	PW124-120	4" POLY WAND	VERITA DE POLIURETANO 4"
9	ST6515SS	S.S. SPRAY TIP 65°	PUNTA DE ROCIADA 65°
*6-9	PWA4	COMPLETE WAND ASSEMBLY FOR FI-2	COMPLETA ASAMBLEA DE VERITA

WARNING

- ALWAYS wear proper protective clothing and goggles when dealing with chemicals. Read your chemical's MSDS sheet before using this unit.
- NEVER point discharge spray toward anyone.
- DEPRESSURIZE unit after use.

INSTRUCTIONS

1. Unscrew the pump assembly (item# 1) from the tank (item# 3).
2. Fill the tank about 1/2 full with the proper mixture of water and foaming chemical.
3. Screw the pump assembly back into the tank.
4. Twist the pump handle 1/3 of a turn counterclockwise and pump the handle.
5. Grasp trigger gun (item# 7) in hand, aim and squeeze the trigger.
6. Adjust foam consistency by turning the needle valve knob (item# 5). Turning it counterclockwise will produce a dryer foam, while turning it clockwise will produce a wetter foam.
7. After use, before emptying or filling, remove all pressure from the unit by pulling up on the pressure relief valve (item# 2).

Note: Silicone lubricant should be used to lube pump o-ring. Do not use oil or mineral spirits, this will damage the o-ring.

INSTRUCCIONES

1. Abre la bomba montaje del tanque.
2. Llenar el tanque con la mezcla de químico y agua.
3. Cierra la bomba montaje.
4. Torque el mango de la bomba 1/3 de un turno de la izquierda y bombeas el mango.
5. Agarre la pistola (artículo 8) puntería y apretón el gatillo.
6. Para ajustar la espuma consistencia volver la vavula de aguja. Vuelvo a la izquierda para espuma humedad o a la derecha para espuma seca.
7. Cuando se terminado remover todo la presion de la unidad tiras la vavula de precion escape.

Pump-up Foamer

